



Sony Handycam DCR-DVD650 LCD Touchscreen Replacement

Written By: santos guitron





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Touchscreen



- Remove the first screw located on the bottom of the LCD screen by using a cross tip screwdriver.

Step 2




- Turn the LCD screen either clockwise or counterclockwise for a better view of the screw.
- Remove the second screw.


Step 3



- Place a plastic opening tool along the outside of the touchscreen.



 Follow the path to remove the panel.

Step 4

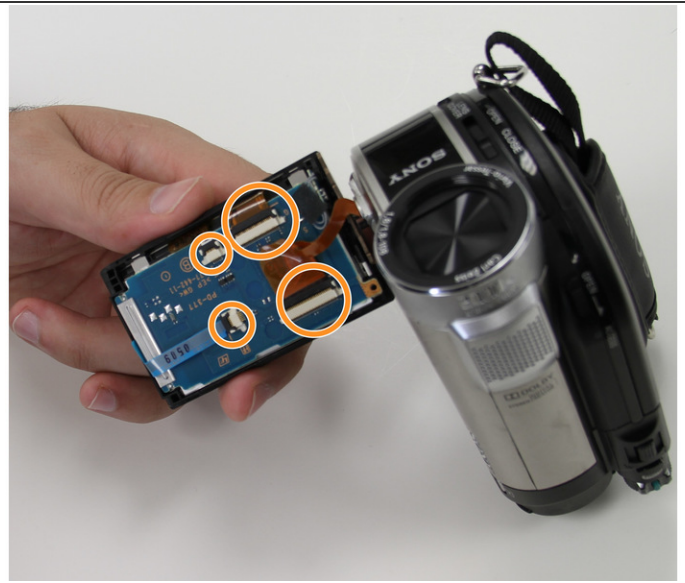

- Remove each of the ribbon cables off by lifting up on the black tab.
- Remove all ribbon cables before continuing unto the next step.

Step 5

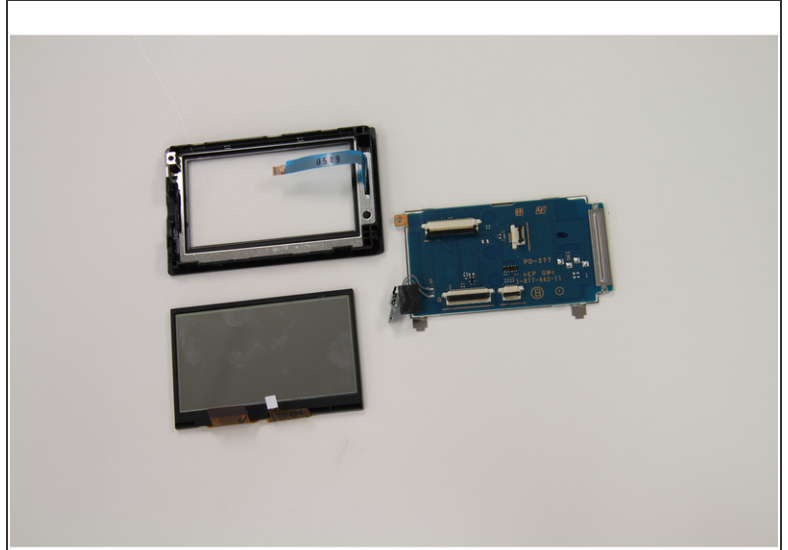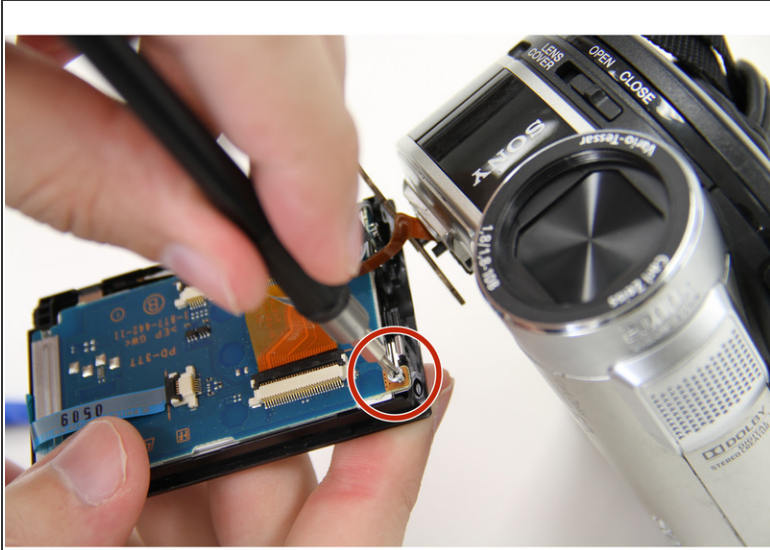

- Unscrew the final screw located on the top left corner.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 04:15:42 AM.